

ST-050 / 051 / 052 APPLICATION NOTE # 0393

FOR USE WITH: Kenwood TK-353

APPROVAL DATE: 26JAN99R BY: RTS

CONNECTIONS

Note	Pin	ST-050 Function	Wire	Host Radio Connection			
	#		Color				
	3	(+) Supply	Red	CN203-3			
	9	(-) Supply	Black	CN203-4			
1	11	Rx Audio Input	Blue	CN203-2			
	1	Rx Audio Output	Wht/Blu	CN203-7			
2	12	Tx Audio Input	Green	Junction of R242 and C254			
3	13	Tx Audio Output	Wht/Grn	Junction of C254 and R241			
	6	PTT Input	Yellow	CN202-2			
4	10	PTT Output	Blk/Yel	CN202-2			
	7	Monitor/Clear/Ciphered	Brown	CN202-1			
	8	Amp. Enable	Blk/Brn	See notes below			
	5	COS	Blk/Org	Junction of R358 and C229			
	2	RS-232 Input	Violet	Used for setup only			
	4	RS-232 Output	Wht/Org	Used for setup only			

Notes:

- 1. Remove R235.
- 2. Remove C254.
- 3. Add a 0.022mfd in series with the Wht/Grn wire.
- 4. Add three diodes to cathode to Blk/Brn wire. One anode to junction of Q206 and R319, second anode to junction of Q205 and R297 and the third anode to junction of R277 and IC213-6.



Configuration Settings for Product Manager

Operating Mode Tab

Tx PowerUp Mode		Ciphered	1	Clear
Functional Rx Conditions		Ciphered		Clear
COS (Carrier Operated Switch)		Active Low		Active High
User Code Key Selection		Double Click		Toggle
PTT Input		Active Low		Common PTT
PTT Output		Active Low		Active High
Special Functions		Amp. Enable		Special PTT In/Out
Missed Sync Reset	5	5		Power Save
Initial Syncronization Delay	System Related			

Audio Levels Tab

Receiver Input Level			200	0	
Receiver Output Level			200	0	
Microphone Input Level			084	3	
Microphone Output Level			084	3	
Syncronization Level	•	3dB	9dB	15dB	21dB