

ST-050 /051 / 052 APPLICATION NOTE # 0394

FOR USE WITH: Kenwood TK-840

APPROVAL DATE: 26JAN99R BY:RTS

CONNECTIONS

Note	Pin	ST-050 Function	Wire	Host Radio Connection
	#		Color	
	3	(+) Supply	Red	CN201-9
	9	(-) Supply	Black	CN201-1
1	11	Rx Audio Input	Blue	Junction of R31 and C56
2	1	Rx Audio Output	Wht/Blu	Junction of C56 and R48
3	12	Tx Audio Input	Green	Junction of C238 and C246
4	13	Tx Audio Output	Wht/Grn	Junction of C246 and R238
	6	PTT Input	Yellow	J201-3
	10	PTT Output	Blk/Yel	Junction of R214 and D202
	7	Monitor/Clear/Ciphered	Brown	IC2-60
5	8	Amp. Enable	Blk/Brn	See note below
	5	COS	Blk/Org	
	2	RS-232 Input	Violet	Used for setup only
	4	RS-232 Output	Wht/Org	Used for setup only

Notes:

- 1. Remove C56 (there are 2 C56 on the layout becareful).
- 2. Add a 6800Pf capacitor in series with the Wht/Blu wire.
- 3. Remove C246.
- 4. Add a 0.022mfd capacitor in series with the Wht/Grn wire.
- 5. Add 2 diode in cathodes to Blk/Brn wire, one anode AM the other to AC.



Configuration Settings for Product Manager

Operating Mode Tab

Tx PowerUp Mode		Ciphered	1	Clear
Functional Rx Conditions		Ciphered		Clear
COS (Carrier Operated Switch)		Active Low		Active High
User Code Key Selection		Double Click		Toggle
PTT Input		Active Low		Common PTT
PTT Output		Active Low		Active High
Special Functions		Amp. Enable		Special PTT In/Out
Missed Sync Reset			Power Save	
Initial Syncronization Delay	System Related			

Audio Levels Tab

Receiver Input Level			200	0	
Receiver Output Level			200	0	
Microphone Input Level			084	3	
Microphone Output Level			084	3	
Syncronization Level	•	3dB	9dB	15dB	21dB